

## FIRE TISCHKAMIN - nur für LAMPENÖL GEBRAUCHSANLEITUNG

Diese Gebrauchsinformation ist vor dem Benutzen Ihres PHILIPPI Tischkamins sorgfältig zu lesen und für die weitere Verwendung aufzubewahren.

### ACHTUNG!

- Den Tischkamin nur entzünden, wenn dieser einen horizontalen und sicheren Stand hat. Den entzündeten Kamin nicht bewegen.
- Der Kamin darf nicht zur Raumheizung genutzt werden.
- Stellen Sie sicher, dass keine brennbaren Materialien im Umkreis von 80 cm um den Kamin herum sind.
- Legen Sie niemals etwas oben auf den Kamin.
- Nicht in Reichweite von Kindern aufbewahren oder verwenden.
- Lassen Sie den Kamin niemals unbeaufsichtigt brennen.
- Beachten Sie die allgemeinen Vorsichtsmaßnahmen im Umgang mit offenem Feuer.

### BEDIENUNGSANLEITUNG:

Verwenden Sie nur hochwertige duftfreie QUALITÄTS-PARAFIN-LAMPENÖLE mit einem Flammpunkt von mindestens 60°C.

1. Packen Sie den Kamin vollständig aus.
2. Befüllen Sie den Tischkamin mit Lampenöl.
3. Dazu entfernen Sie den großen Dochthalter in der Mitte des Kamins mit Hilfe der mitgelieferten Pinzette. Halten Sie die Pinzette gerade von oben.
4. Füllen Sie das Lampenöl mit Hilfe des mitgelieferten Trichters in den Tank. Die maximale Füllmenge des Behälters beträgt 800 ml und darf nicht überschritten werden. Auf der Seite des Gehäuses befindet sich ein Loch für den Druckausgleich. Tritt Öl aus diesem Loch heraus, ist der Kamin zu voll befüllt.
5. Setzen Sie den Dochtalter wieder ein und verschrauben Sie ihn ordnungsgemäß. Überprüfen Sie den festen Sitz des Dochtalters. Justieren Sie den Docht so, dass maximal 1mm aus dem Loch des Dochtalters herausragt. Sollte sich nach dem Befüllen Lampenöl auf der Bodenplatte befinden, entfernen Sie dieses vor der Benutzung vollständig. Der Tischkamin darf vorher nicht entzündet werden - Brandgefahr!
6. Legen Sie dann die Steine zwischen die Dochte und zünden Sie an.



### Regulierung der Flammenhöhe:

Die Flammen werden höher, je weiter der Docht aus der Halterung herausgezogen wird. Sind die Flammen zu groß, stecken Sie die Dochte etwas weiter hinein. Sind die Flammen zu klein, ziehen Sie die Dochte etwas weiter heraus. Verwenden Sie für die Regulierung immer die mitgelieferte Pinzette.

### Achtung!

Justieren Sie den Docht so, dass er maximal 1mm aus dem Loch des Dochtalters herausragt.

### Reinigung:

Sie können den Kamin bedenkenlos mit Spülmittel reinigen. Tauchen Sie den Kamin nicht unter Wasser. Achtung: Der Tischkamin ist nicht spülmaschinengeeignet.

### Verwendung Drinnen/Draußen:

Sie können den Kamin drinnen und draußen verwenden. Bitte verwenden Sie immer eine feuerfeste Unterlage. Verwendung draußen: Achten Sie darauf, dass kein Regenwasser in den Kamin läuft. Wenn sich dieses mit dem Lampenöl vermischt, brennt der Kamin nicht mehr.

### Hitzeentwicklung:

Der Kamin ist aus Metall gebaut, welches Hitze gut leitet. Wenn der Kamin brennt, können der Tank, die Steine und die Glasscheiben heiß werden, überprüfen Sie dieses bevor Sie ihn anfassen. Der Originalkamin verwendet Baumwoll-ummantelte Glasfaserdochte mit 4 mm Durchmesser. Es dürfen nur Dochte dieser Bauart mit einer Länge von > 75 mm verwendet werden. Nach längerem Brennen verkohlen die Glasfaserdochte an den Spitzen. Bitte schneiden Sie diese um ca. 1 mm ab, damit sie wieder gut brennen.

### ACHTUNG!

Dieses Produkt enthält im gebrauchsfertigen Zustand Lampenöl und ist für Kinder unzugänglich aufzubewahren. Ebenso darf der mitgelieferte Trichter mit Verlängerung sowie Ihr Lampenöl-Vorratsbehälter nicht in die Hände von Kindern gelangen.

Wir wünschen Ihnen viele (er)leuchtende Stunden mit Ihrem Tischkamin,

Ihr PHILIPPI Team



Philippi

## FIRE TABLE FIREPLACE – only for LAMP OIL INSTRUCTIONS

### IMPORTANT!

You must read the two included product information sheets very carefully before assembling, preparing or using the PHILIPPI oil lamp. There are important instructions which must be followed to ensure your item can be used safely – any failure to follow these instructions might invalidate any warranty you may have on this product. Retain this information for further reference/use.


### ATTENTION!

- Only ignite the table fireplace if it has been placed on a fireproof base and it is level and secure. Do not move the fireplace once it is lit.
- The fireplace must not be used for heating purposes.
- Make sure that there is no flammable material within an 80cm radius of the oil lamp.
- Never cover or lay anything on top of the oil lamp.
- Do not use or store the fireplace within the reach of children.
- Never leave the fireplace unattended whilst burning.
- Please observe the general precautionary measures when dealing with open fire.

### INSTRUCTIONS:

Only use high-quality PARAFINIC LAMP OIL with a minimum flashpoint of 60°C. Important: do not use any type of fragrance oil or essences.

1. Unpack the fireplace completely.
2. Ensuring the lamp is level, fill the tank with lamp oil to a maximum of 800ml.
3. To fill the lamp with lamp oil, take out the big wick holder in the middle using the metal tweezers provided. Hold them upright and straight. The central wick holder can be stiff, so hold the tweezers near the bottom and turn with pressure.
4. Using the funnel, slide its tube into the opening and pour the lamp oil into the funnel. Fill the tank to a maximum of 800 ml of lamp oil. Do not exceed more than 800ml under any circumstances. There is a small hole for pressure equalization on side of the body. If oil leaks out of this hole, the fireplace has been overfilled.
5. Then re-insert the wick holder with the trailing wick into the hole on the base.
6. Important: Adjust the wicks (trimming if necessary) so that they poke out of the wick holders no more than 1mm above the metal casing.

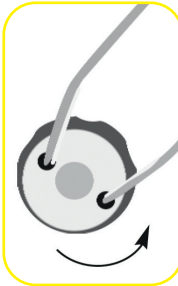

7. Should there be any oil on the base please clean/absorb it before use. Do not light the wicks if there is oil on the base as this is a fire hazard!
8. Place the stones evenly between the wick holders. When all the stones are in place, light the wicks.

### Regulating the height of the flames:

The longer the wicks, the higher the flames will burn. If the flame is too high, extinguish the flame and slightly push the unlit wick back into the holder so that it is shorter. If the flames are too high this can produce smoke and cause the unit to become too hot. Should the flame be too low, carefully pull the unlit wick out a little to make longer. Please use the tweezers provided for this.

**WARNING:** Adjust the wicks (trimming if necessary) so that they poke out of the wick holders no more than 1mm above the metal casing.

### Cleaning:

The table fireplace can easily be cleaned with normal dishwashing liquid. Attention: The table fireplace is NOT dishwasher compatible.

### Interior and Exterior Use:

You can use the table fireplace both inside and outside. Please make sure that you use a "hot-mat" when placing the table fireplace on any furniture. Do not leave the fireplace outside when not in use.

### Development of heat:

The table fireplace is made of metal that conducts heat. Once the table fireplace is lit, the tank, stones and glass can become hot. Please be extremely cautious when touching or picking up the fireplace to avoid injury or burns. The original wicks are 4mm diameter cotton coated fibre glass with a length no longer than 75mm – only use replacement wicks with this specification. After prolonged use, the glass fiber wicks carbonize at the tips. Please cut them by ca. 1mm to make them burn well again.

### ATTENTION!

Oil lamps, equipment, and lamp oil must be kept sealed and out of reach of children. Read the product information carefully before assembly, preparation and use.

We wish you (de)lightful hours with your new Philippi Table Fireplace!

Your PHILIPPI-Team

